

Saturn Series

SE-615W



User Manual
Version 1.0

About this Manual

Thank you for purchasing Saturn Series Touch Terminal. This terminal offers highly enhanced features, with easy connection to various optional devices for optimal performance. This user manual describes how to setup and connect your terminal.

Copyright

© Copyright 2019

All rights reserved. This product and related documentation are protected by copyright and are distributed under licenses restricting their use, copying, and distribution. No part of this documentation may be reproduced in any form by any means without prior written authorization of the manufacturer and its licensors, if any.

Safety Information



Before you Proceed:

- Read the safety notices and the User Manual carefully before using the product.
- Keep the box and packaging in case the product needs to be shipped in the future.
- Follow the product and warning label instructions.
- Any changes or modifications that do not follow the instructions in this manual will void this product's warranty.



Power Supply Safety Notes:

- To avoid electric shocks, disconnect the power cord from the electrical outlet before relocating the system.
- Make sure the voltage of the power outlet conforms within voltage range of the terminal. Failure to comply may cause the electric shock or damage to the terminal. If you are not sure of the electricity voltage that you are using, consult your local electricity company.
- To avoid fire or electric shocks, do not overload electric power outlets.
- Protect the power cord from being walked on or pinched particularly at plug, convenience receptacles, and the point where they exit from the apparatus.

Operating Instructions

- Keep this manual for future reference.
- Keep this equipment from moisture and dust.
- Place the equipment on a stable surface before setting it up.
- If there is any of the following situation arise, notify a qualified service technician immediately:

- ◇ The power cord or plug is damaged.
- ◇ The equipment has been dropped and damaged.
- ◇ The equipment does not function normally.
- Do not leave the equipment in a non air-conditioned environment where the storage temperature may go above 70°C (158°F), as this can cause damage to the equipment.

Maintenance

- Gently wipe screen with a clean soft hair lens brush, or a lint-free cloth.
- Do not apply pressure to the screen while cleaning.
- Do not spray any liquid directly onto the screen or the casing of the terminal.
- Chemical cleaners have been reported to cause damage on the screen of the terminal.

Warning and Attention

- The technical descriptions and specifications of the equipment are subject to change without notice.
- For safety reasons, wear gloves when assembling the product.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.

CE Statement

- A Class III equipment with an enclosure made of HB material and using a non-special connector for the a.c./d.c. input has to have a marking stating the following: “Use only power supplies listed in the user instructions” or “For applicable power supplies see user instructions”. This statement shall also be in the user-instructions.
- If product with laser module, the class of laser should be mentioned. The warning as attachment.

Federal Communications (FCC Statement)


This device complies with FCC Rules Part 15. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received including interference that may cause undesirable operation.

This equipment has been tested and found to comply within the limit of a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer’s instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by switching the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the interference receiving antenna.
- Increase the distance of separation between the equipment and interference receiver.
- Connect the equipment to a power outlet on a circuit different from that to which the interference receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning



RoHS

LVD Statement

- A Class III equipment with an enclosure made of HB material and using a non-special connector for the a.c./d.c. input has to have a marking stating the following: “Use only power supplies listed in the user instructions” or “For applicable power supplies see user instructions”. This statement shall also be in the user-instructions.
- If product with laser module, the class of laser should be mentioned. The warning as attachment.

WEEE Notice

The WEEE logo (shown at the left) on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local city center, household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.



Contents

Chapter 1: Introduction.....	7
Package Contents	7
Overview of Saturn Series	8
Front View	8
Rear View	8
I/O Ports.....	9
Powering ON/OFF Saturn POS.....	10
Physical Dimensions	11
Touch Terminal Specifications	15
Peripherals Specifications	16
Chapter 2: Preparing For the Installation.....	17
Main Board Jumper Setting and Connector Definition	18
Bottom Side	18
Bottom Side Layout Content List.....	19
TOP Side.....	20
System Default Settings	21
Chapter 4: BIOS Setup	22
Chapter 5: Hardware Installation	26
Replacing the Rear Covers	26
Installing / Replacing the HDD	27
Installing the Customer Display (Optional)	27
Installing the Secondary LCD Display (Optional)	29
Installing the Identification Reader (MSR/iButton/Fingerprint/RFID/ M+i) (Optional).....	30
Installing the VESA Mount (Optional)	32


Chapter 6: Frequently Asked Questions (FAQ)	33
How do I clear CMOS?.....	33

Introduction


Congratulations on your purchase of this Touch Terminal. Your easy-to-use POS terminal is designed to help you enhance your business flexibility by offering superior customer experience.

Package Contents


Before setting up your Touch Terminal, check that the package contains the following items. If any of the items is missing or damaged, contact your vendor immediately.

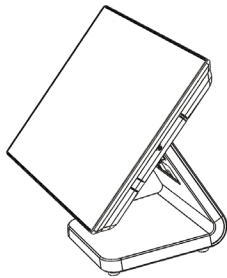

Touch Terminal

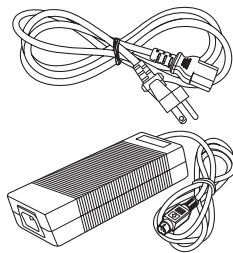


Power Cord & Adapter

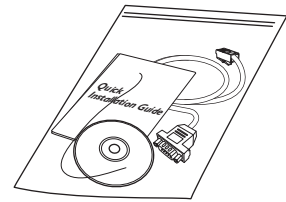


Accessory Kit


Optional Accessories




**Customer Display
(VFD/ LCM)**

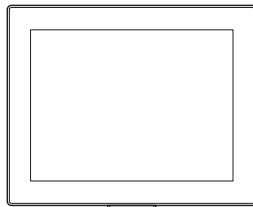

**Secondary LCD
Display (8"/10"/15")**

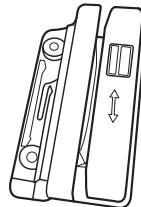


**Magnetic Stripe Reader
(MSR)**

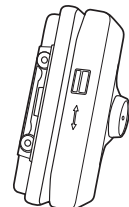


MSR + iButton Reader



**Radio-Frequency
Identification Reader
(RFID)**



Fingerprint Reader




iButton Reader

Overview of Saturn Series


The figures in this section illustrate the components (including input and output ports) located at the front and rear of your Touch Terminal.

Front View

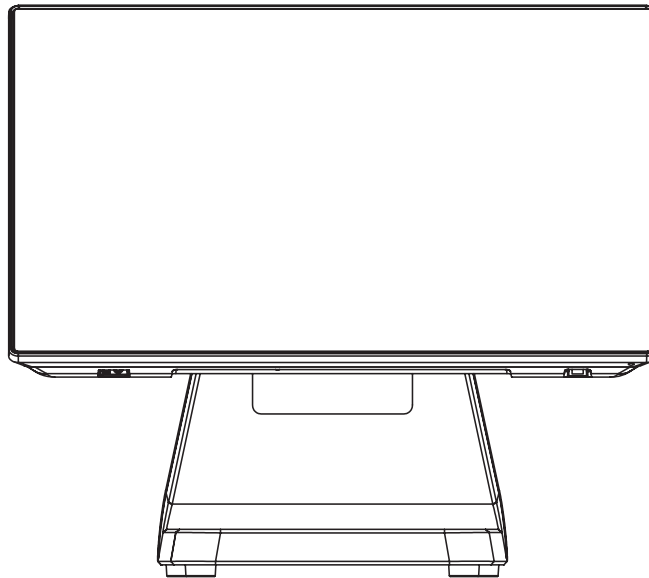

Standard Type


Rear View

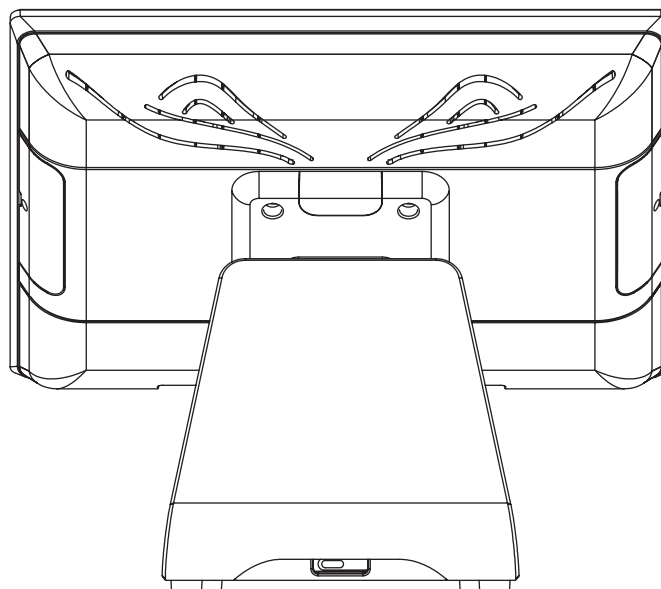

Standard Type

I/O Ports

SE-615W

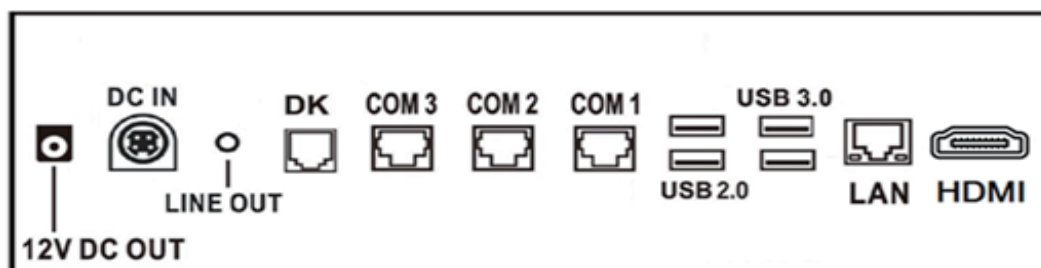


Item	Description
DC OUT jack	12V DC power output
DC IN jack	24V DC power input
Line Out port	Audio line output connector
DK port	Cash Drawer output
COM ports	COM1/2/3 connectors
USB2.0 ports	USB2.0 connectors
USB3.0 ports	USB3.0 connectors
LAN port	Gigabit LAN connector
HDMI port	HDMI output connector

Powering ON/OFF Saturn POS

Power ON Saturn POS

The power button is located at the bottom side of the back cover. Press down the power button to power on the POS.

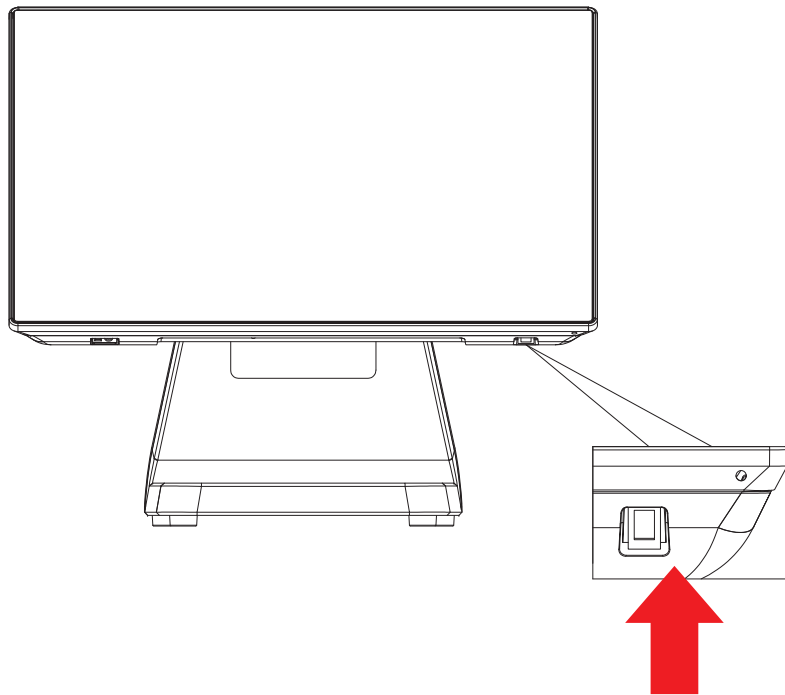

Power OFF Saturn POS

In most cases, press the power button of the POS to power the system off. If the terminal fails to turn off the machine for unknown reasons, please be advised to hold the power button more than 4 seconds to force a shutdown of the system.






Status LED Indicator

LED status indicator, which is located at the bottom edge of the LCD panel, is mainly responsible for notifying users of the current system status by emitting various LED signals. In the chart provided below, it describes all the possible LED status as a quick reference.





LED Status	System Status	AC power adapter	Description
OFF	OFF	OFF	System power OFF
Green	OFF	ON	System standby
Blue	ON	ON	System power ON

Physical Dimensions





Standard Display

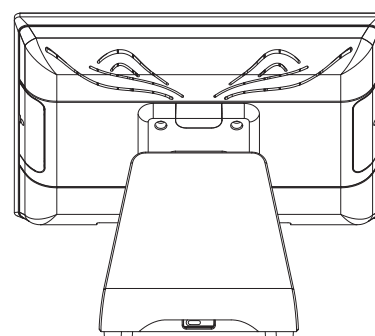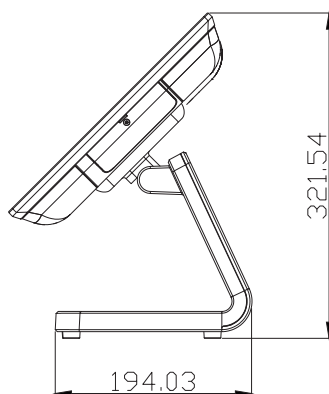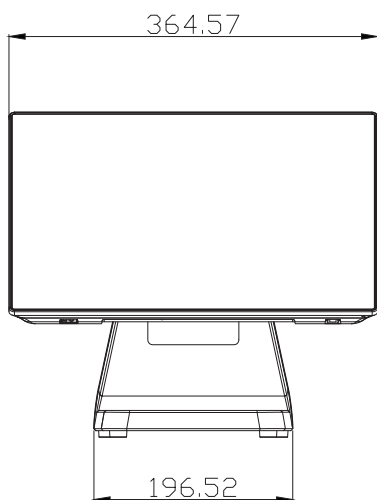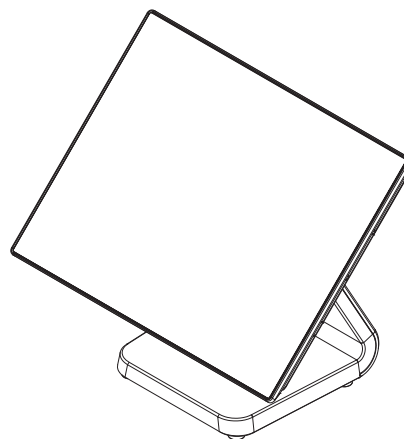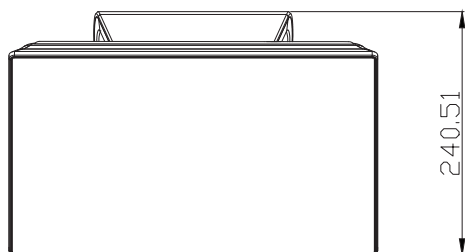





LCM (Liquid Crystal Module) VFD Customer Display

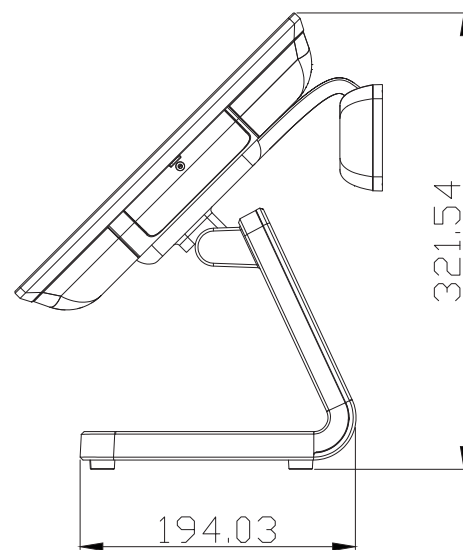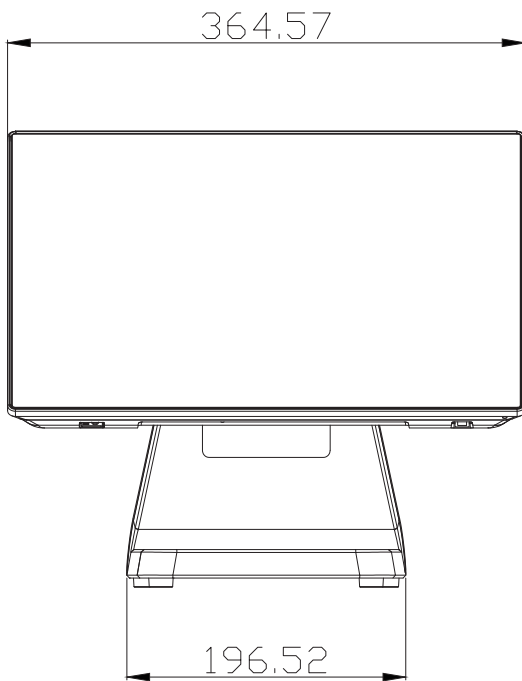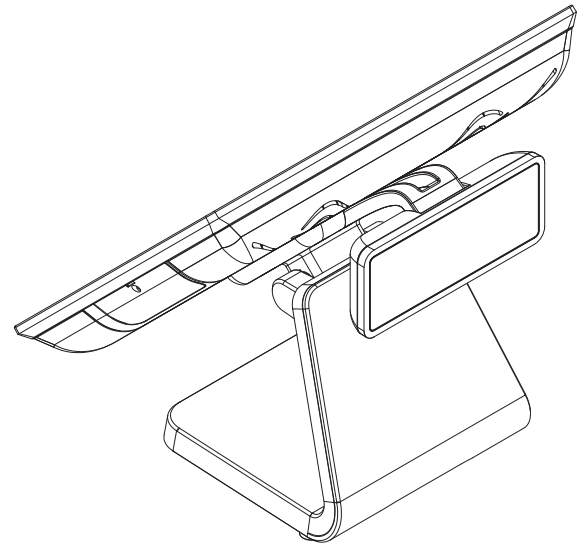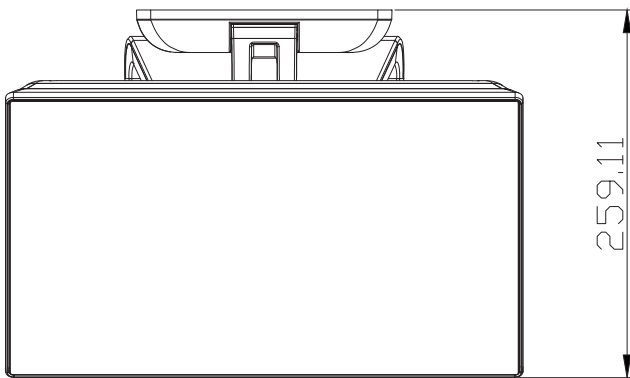

10" Secondary LCD Display

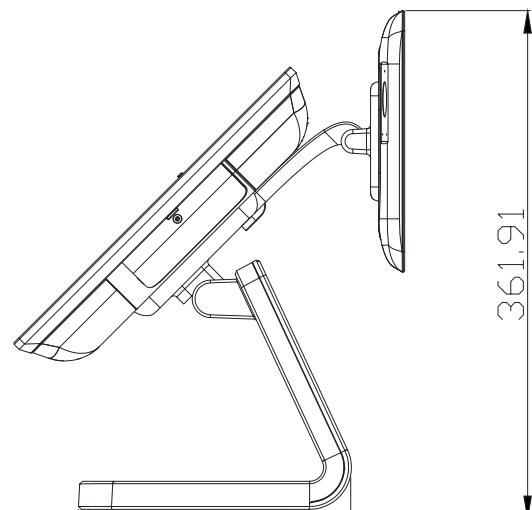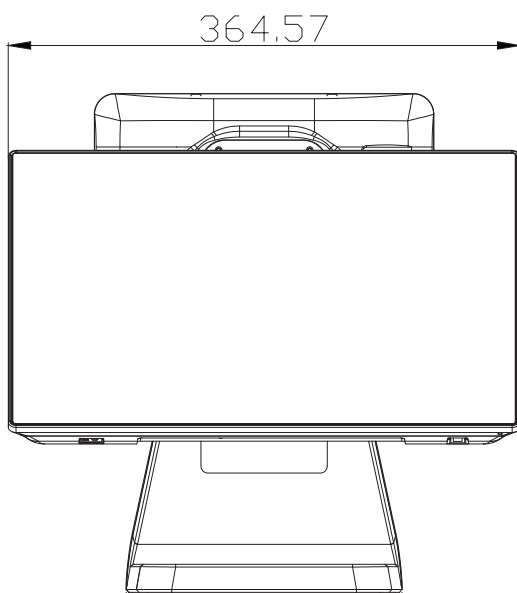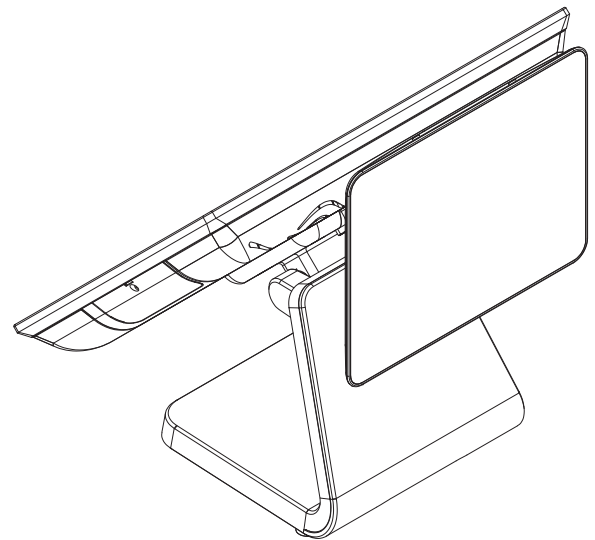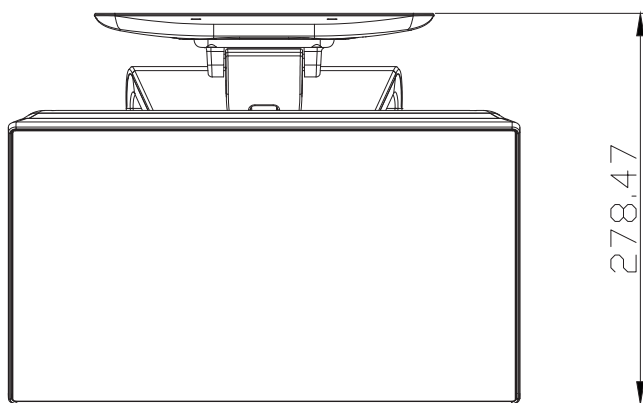

15" Secondary LCD Display

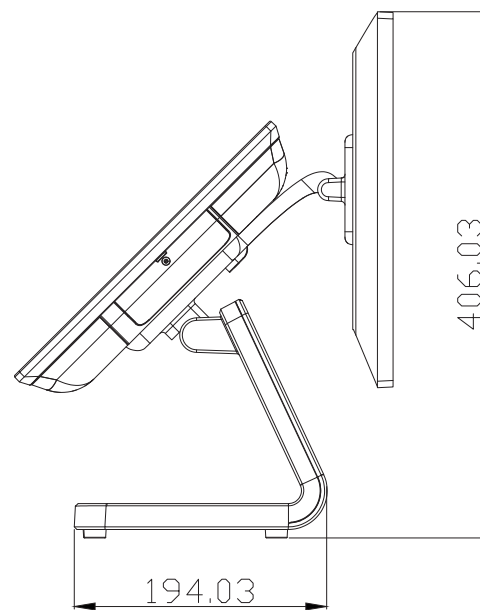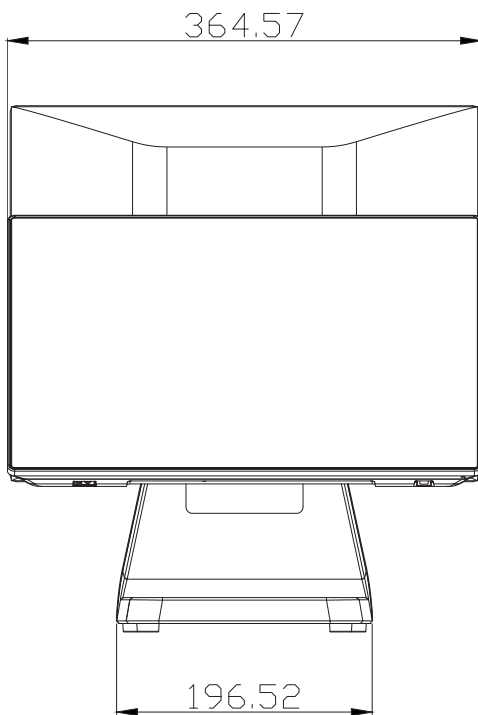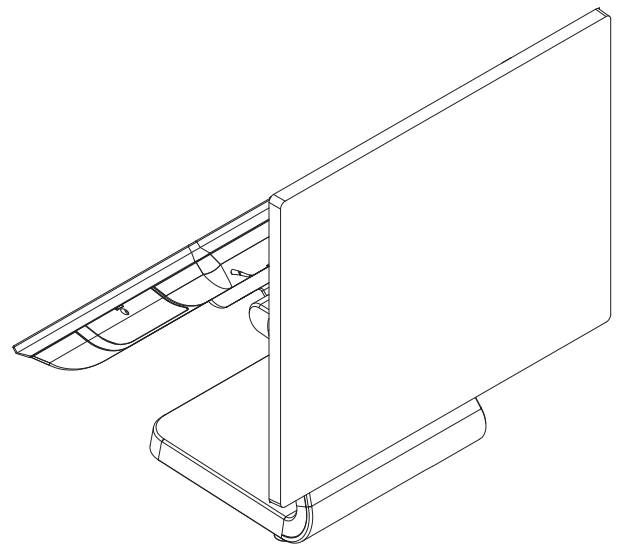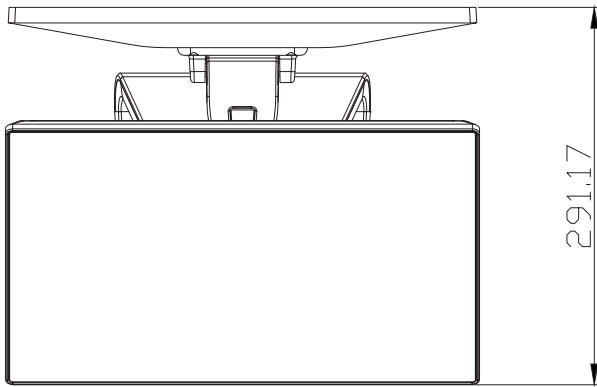


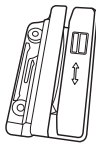
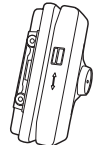

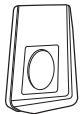
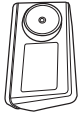


Specifications

Touch Terminal Specifications

System	CPU	Intel® Celeron® Processor J6412
	RAM	4G / 8G / 16G
Storage	SSD or HDD or M.2	SSD: 64G / 128G / 256G M.2: 64G / 128G / 256G HDD: 500G
OS	Operating Systems	Win 10 IoT Enterprise LTSC / Linux
Display	Type	15" LED Backlit LCD Display
	Resolution	1024 x 768 (4:3)
	Brightness	300 cd/m²
Touchscreen	Type	Flat Projected Capacitive Touch
I/O	Standard I/O	2 x USB 2.0 2 x USB 3.0 3 x RJ-50 RS-232 (default 0V; COM1, COM2, COM3 0V/5V/12V by Jumper) 1 x LAN 1 x RJ-11 12V/24V (default 24V for Cash Drawer) 1 x HDMI 1 x Audio Output Phone Jack 1 x DC 12V Out for DC Out 1 x DC 19V In with Lock for DC In
	Buttons	1 x Power On/Off Button
	Extension Kits (Optional)	MSR Card Reader Kit / RFID Reader Kit / i-Button Reader Kit / Fingerprint Reader Kit / 2D Scanner Kit / VFD Customer Display Kit / LCM Customer Display Kit / 10.4" 2nd Display Kit / 15" 2nd Display Kit
Power	Adapter	External DC Power Adapter 65W, 19V 3.43A
Mechanical	Dimensions (W x D X H)	365 x241 x 322 mm (14.37*9.49*12.68 in)
	Weight	5.7 kg (12.57 lb)
Environment	Operating Temperature	0°C to 40°C (32°F ~ 104°F)
	Storage Temperature	-25°C to 70°C (-13°F ~ 158°F)
	Safety Certifications	CE / FCC

Peripherals Specifications

2 nd LCD display	Model No.	MN-10B0H	MN-15A0H	
	LCD Panel	10.1"	15"	
	Resolution	1024 x 600	1024 x 768	
	Viewing Angle	140° (H) / 120° (V)	88° (H) / 88° (V)	
	Response Time	25ms (typical)	8ms (typical)	
	Brightness	220 nits (typical)	300 nits (typical)	
	Video Input	HDMI	HDMI	
	Power Supply	DC 12V	DC 12V	
LCM	Model No.	CM3000		
	Polarizer color	White		
	Backlight color	Blue		
	Display Capacity	20 characters x 2 lines		
	Character format	5 x 8 dots		
	Character type	International (Default) English-Russia/English-Japanese/Traditional Chinese/Simplified Chinese (Optional, factory-installed required)		
	Dot Size	0.93 (W) x 1.11 (H) mm		
	Input power type	5V DC		
	Interface	RS232		
Can be assembled on the same package with the system shipping				
VFD	Model No.	CM7100		
	Display Method	Vacuum Fluorescent Display (VFD)		
	Polarizer color	Yellow green		
	Backlight color	Black		
	Brightness	500-1000 cd/m2		
	Display capacity	20 characters x 2 lines		
	Character format	5 x 7 dot matrix, cursor		
	Character type	95 Alphanumeric, 32 International characters		
	Dot size	0.55 (W) X 0.75 (H) mm		
	Input power type	5V DC		
	Interface	RS232		
Can be assembled on the same package with the system shipping				
2 in 1 Identification Reader	Interface	RS232		
  Magnetic Stripe Reader (MSR) MSR + iButton Reader	MSR	ISO Track 1/2/3 single/dual/ triple tracks of magnetic card, support ANSI/ISO Standards 7810, 7811 1/5, 7812 & 7813. USB HID Keyboard mode interface		
	MSR + iButton Detector	Dallas DS1990A compliment / With leading / ending programming function. USB HID Keyboard mode interface		
Can be assembled on the same package with the system shipping				
  Radio-Frequency Identification Reader (RFID) Fingerprint Reader  iButton Reader	Biometric Fingerprint Recognizer	Digital Personal U. are .U 4500B (Optical Type / Blue Light) Module Size: Approx. 57.7mm * 35.8mm*11.0mm Compatible with USB 1.1 / 2.0 (Full Speed). USB HID Keyboard mode interface		
	RFID reader	Frequency 13.56MHz. ISO14443A card type MIFARE® 1K/4K/8K card type. Read only. USB HID Keyboard mode interface		
	iButton Detector	Dallas DS1990A compliment / With leading / ending programming function. USB HID Keyboard mode interface		
Can be assembled on the same package with the system shipping				

Preparing For the Installation


Before you start installing Touch Terminal, read the following instructions.

- SE-615W do not support PCI slot.
- Do not insert or remove any device or component from the SE-615W while the power is turned on.
- If using SE-615W in a dusty environment, clean the Touch Terminal regularly.
- Only USB devices are Hot Swap capable. Be sure to turn off the power of the touch terminal and the device before making any connection or disconnection.
- The spill proof design of SE-615W conforms to IP65 standard (Front panel only).
- Always seek the help of authorized service personnel in disassembling the terminal. The manufacturer will not be held responsible in the event of damage caused by an unauthorized person.
- Before installation or disassembling of the terminal, ensure that the power is turned off. Otherwise, electric shock may occur and may void the warranty.
- For systems preloaded with Windows on the storage(O/S pre-installed as an option), the manufacturer provides recovery image. System Integrator shall take care of software restoration after having an image recovery. A manufacturer-supplied USB interface COMBO drive will be required for such action. Other brands of COMBO drive may require a specific driver. Please use the recovery image for rescue operation only. Using it otherwise may wipe out whatever is stored in the storage. Then follow the instructions from your system integrator for software recovery.

Main Board Jumper Setting and Connector Definition

Bottom Side

SE-615W

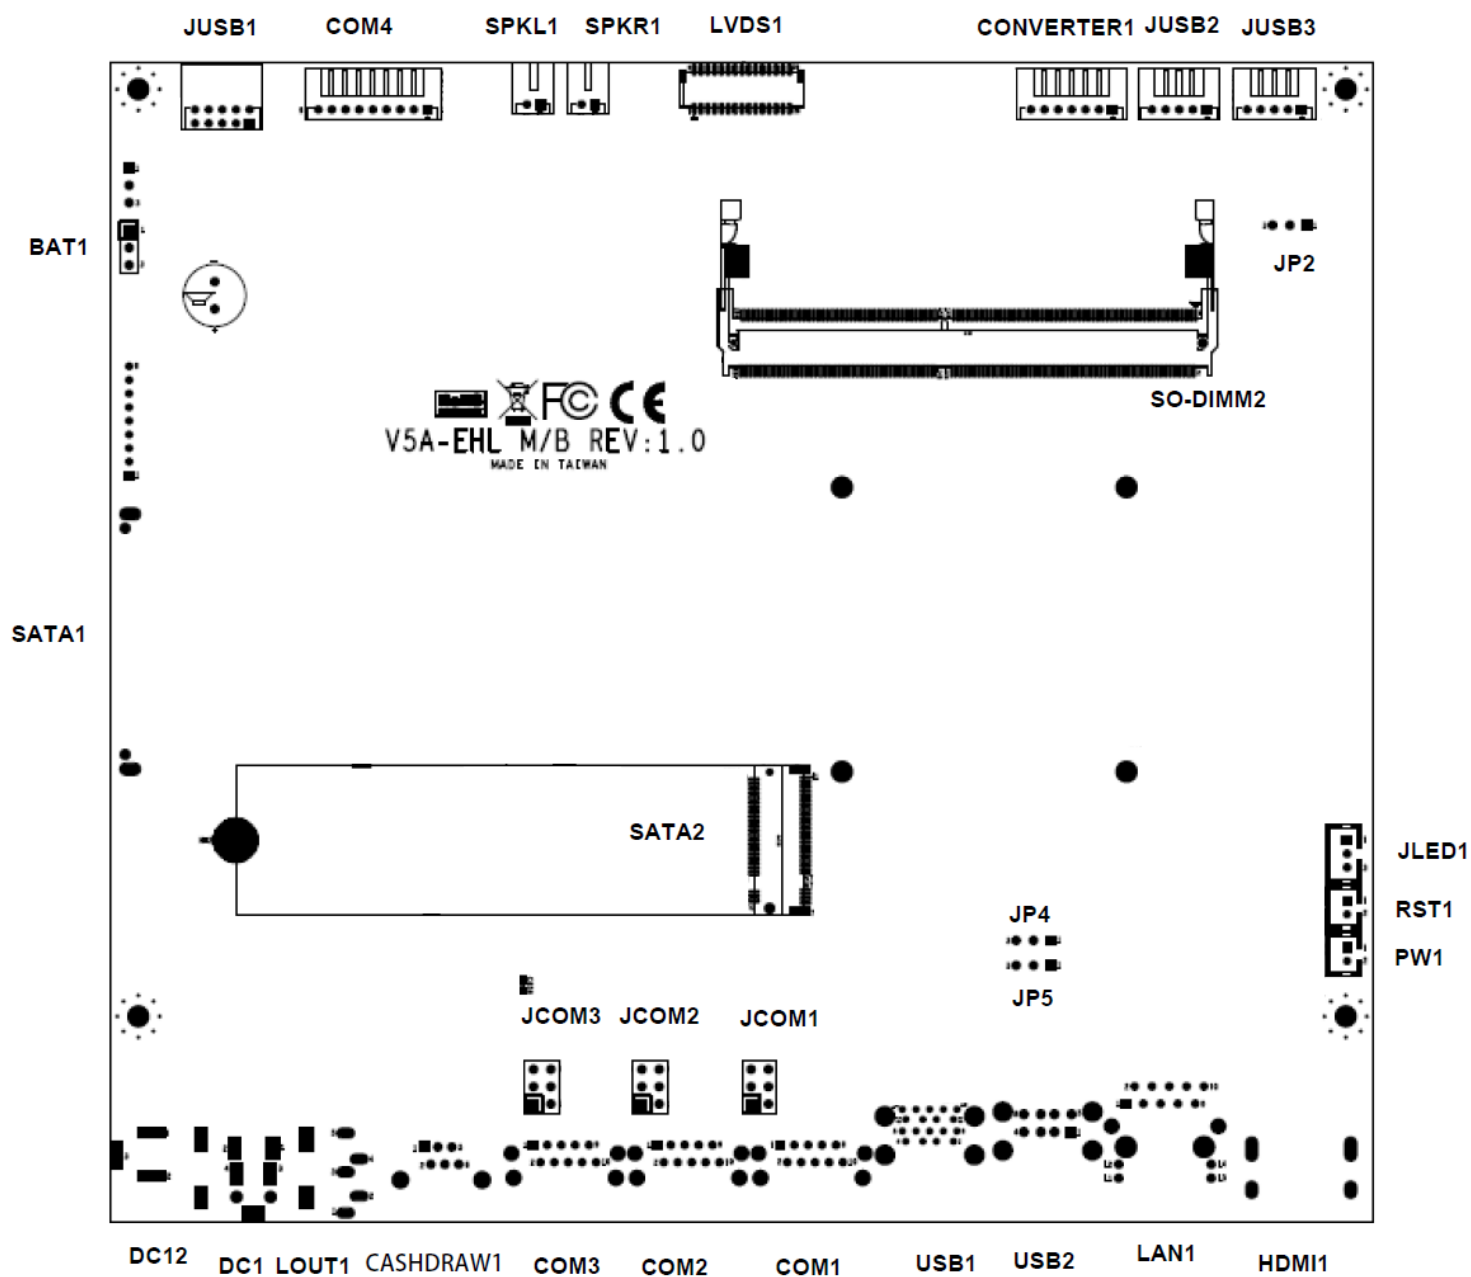


Bottom Side Layout Content List

Connector/Jumper	Description
HDMI1	HDMI output
LAN1	LAN connector
USB1	USB2.0 *2 connector
USB2	USB3.0 *2 connector
COM1	COM1 connector
COM2	COM2 connector
COM3	COM3 connector
CASHDRAW1	Cash Drawer output
LOUT1	Audio line output connector
DC1	DC power input
DC12	12V DC power output
JUSB1	USB port for USB Touch
JUSB2	USB port for POS input device
JUSB3	USB port for POS input device
COM4	COM4 connector for RS-232 POS input device
LVDS1	2x15 LVDS connector
SPKR1	Speaker connector
SPKL1	Speaker connector
CONVERTER1	LED backlight inverter connector
SATA1	SATA Connector
SATA2	M.2 2280 M key
BAT1	Battery Connector
RTC1	Clear CMOS Contents
SO-DIMM2	DDR4 SO-DIMM
JLED1	LED Connector

TOP Side

SE-615W

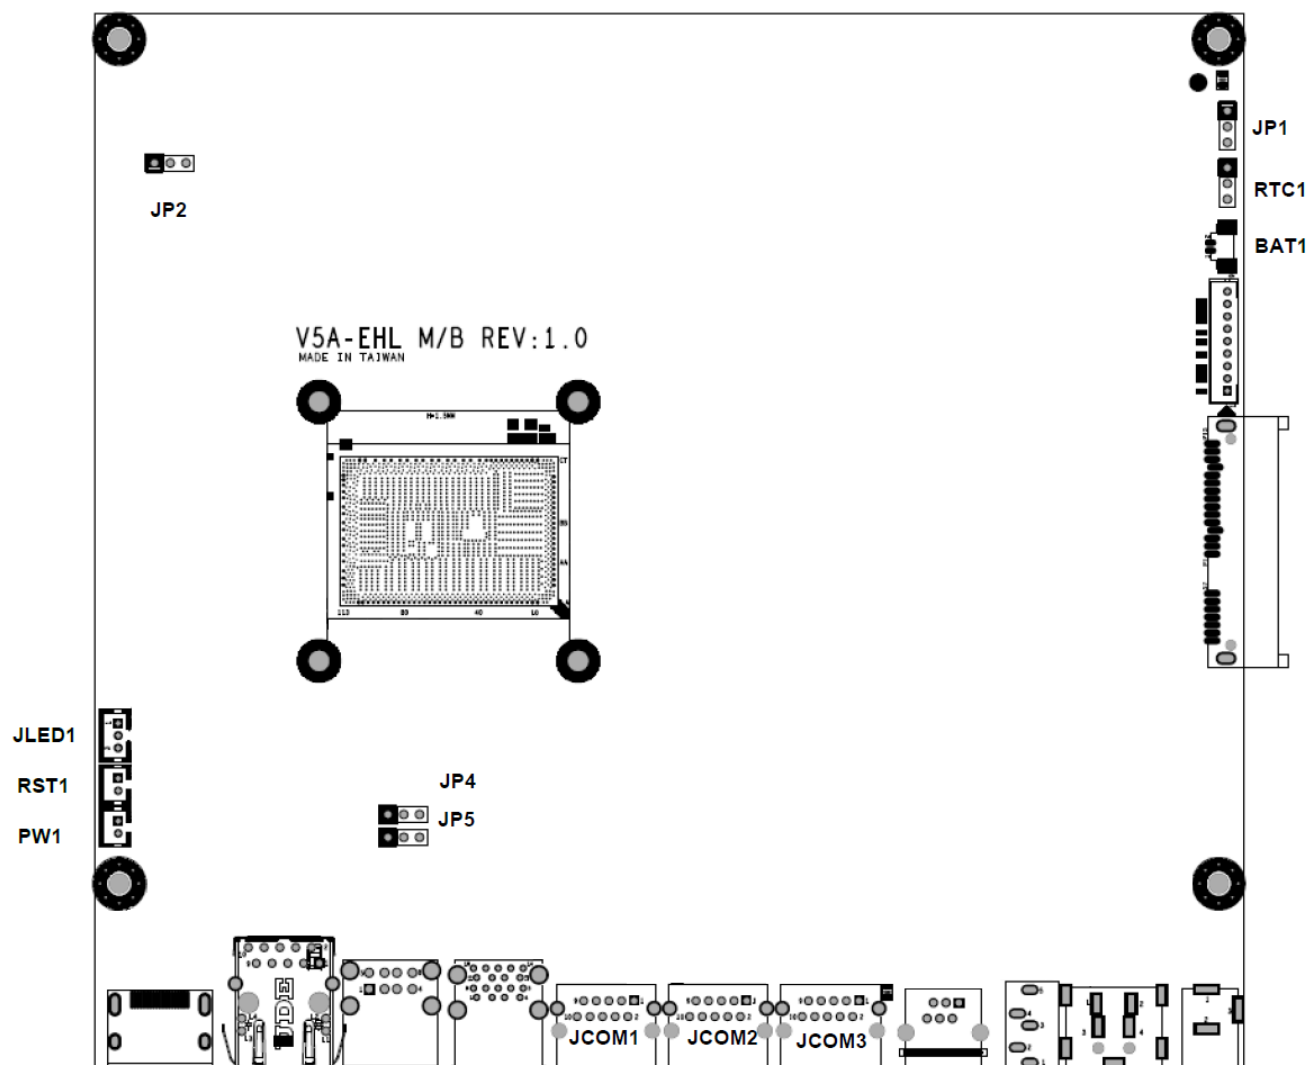

Bottom Side Layout Content List

Connector/Jumper	Description
JP1 / 2 / 4 / 5	USB Power Selection
RTC1	Clear CMOS Contents
JCOM1 / 2 / 3	COM 1~3 D-SUB PIN9 VOLTAGE SELECT
PW1	Power Button Connector
JLED1	LED Connector

JP1/ JP2/ JP4/ JP5: USB Power Selection

1 2 3 □ ○ ○	Pin 1-2 Short/Closed	5VSB(Default)
	Pin 2-3 Short/Closed	5V

RTC1: Clear CMOS Contents

1 2 3 □ ○ ○	Pin 1-2 Short/Closed	Normal(Default)
	Pin 2-3 Short/Closed	Clear CMOS

System Default Settings

The following is the information on default settings for Touch Terminal serial ports

Voltage Output Definition

SE-615W

Voltage Output	
Connector Item	Power Support
COM 1 for extension	5V / 12V Select by jumper
COM 2 for extension	5V / 12V Select by jumper
COM 3 for extension	5V / 12V Select by jumper
Cash Drawer	24V / 12V Select by jumper
DC Output	12V
USB 2.0	5VSB
USB 3.0	5VSB

COM Port Setting Definition

SE-615W

Item	COM1	COM2	COM3	COM4	COM5
I/O Address	3F8	2F8	3E8	2E8	338
IRQ Setting	IRQ4	IRQ3	IRQ5	IRQ6	IRQ7

Cash Drawer Setting Definition

SE-615W

COM Port	I/O Address	Baud Rate	Open Command	Respond Command
COM5	338	9600	01h	02h

BIOS Setup

4-1 SE-615W

Entering BIOS Setup


1. Connect an alphanumeric USB keyboard to the motherboard.
2. Apply power to the motherboard.
3. When the motherboard boots, press [F2] to display the BIOS Setup.
4. When the motherboard boots, press [F10] to display the Boot Menu.

Selecting Menu Options

- To select (highlight) options and menu screens, use the arrow keys.
- To select a submenu, use the [Enter] key.
- To exit from a submenu, use the [Esc] key.
- To change field values, use the [F5] and [F6] keys.
- To view help information on the possible selections for the highlighted item, select the [F1] key.
- To load optimal default, select the [Exit Menu] and do any of the following:
 1. Select [Load Optimal Default], and then press [Enter].
 2. Or, press [F9] and then press [Enter].
- To save the changes, select the [Exit Menu] and do any of the following:
 1. Select [Exit Saving Changes], and then press [Enter].
 2. Or, press [F10] and then press [Enter].


Main Tab

Under <Main>, select <System Time> or <System Date> to change the system date and time.

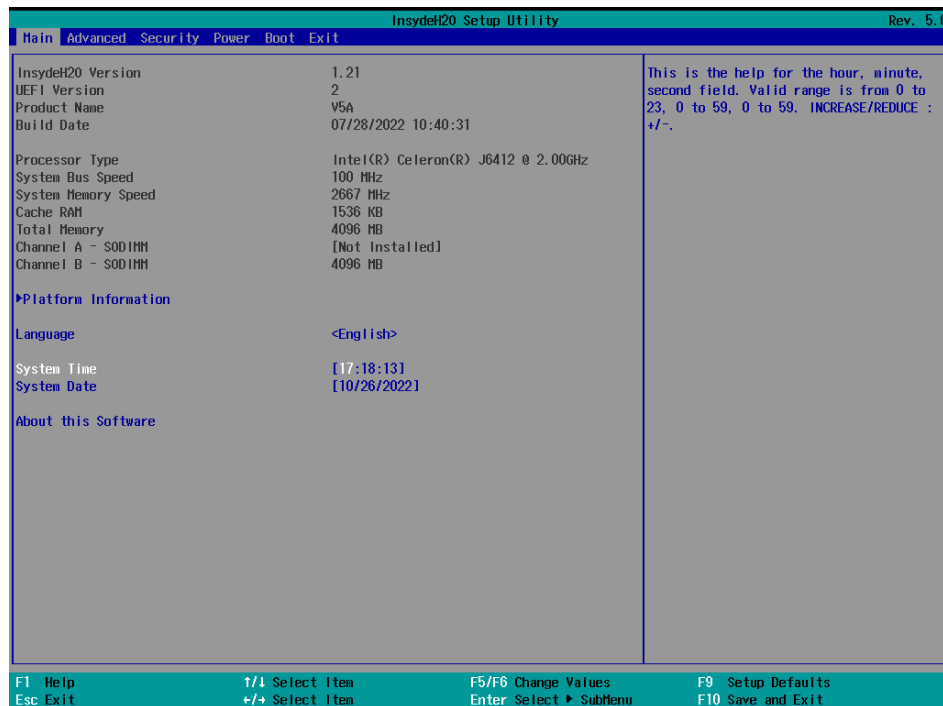


Security Tab for setting Supervisor Password


1. Select <Security> and then Set <Supervisor Password>.

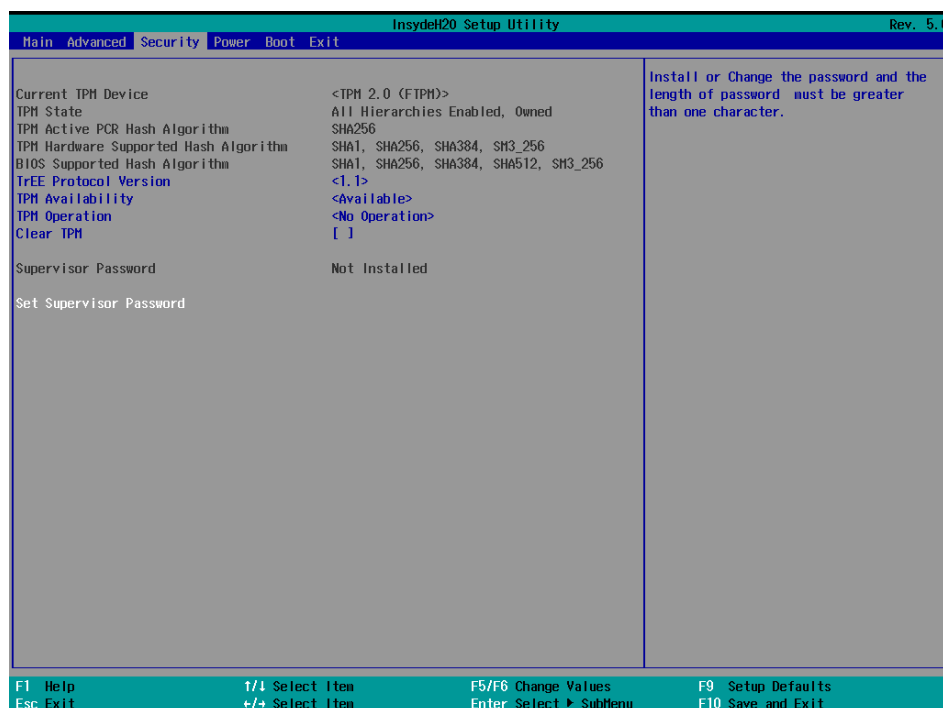

2. Enter New Password and then Enter New Password Again and then select [YES].

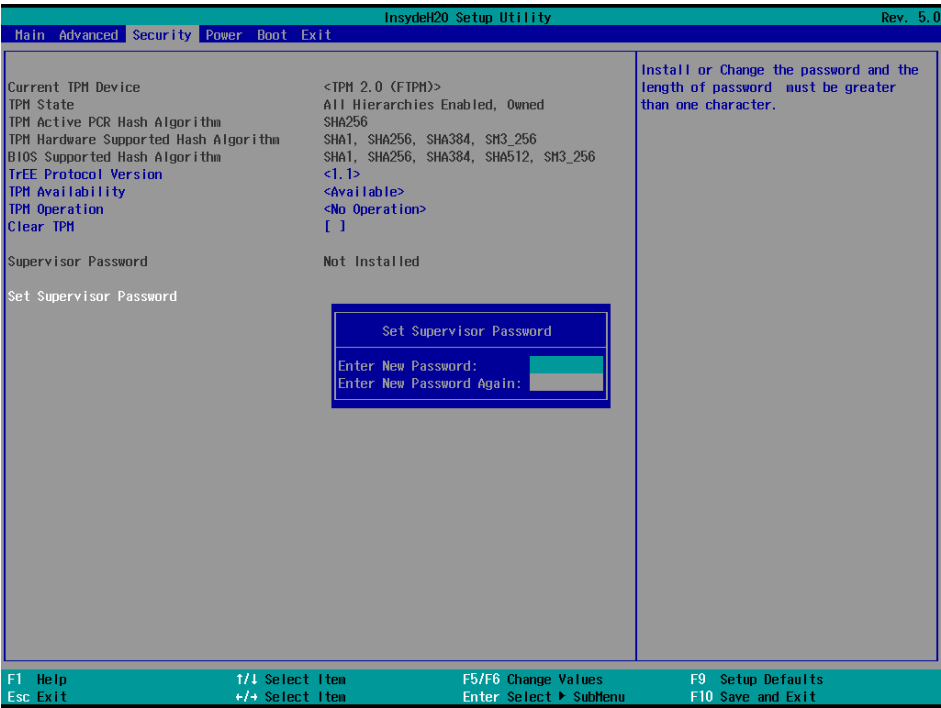


Power Tab

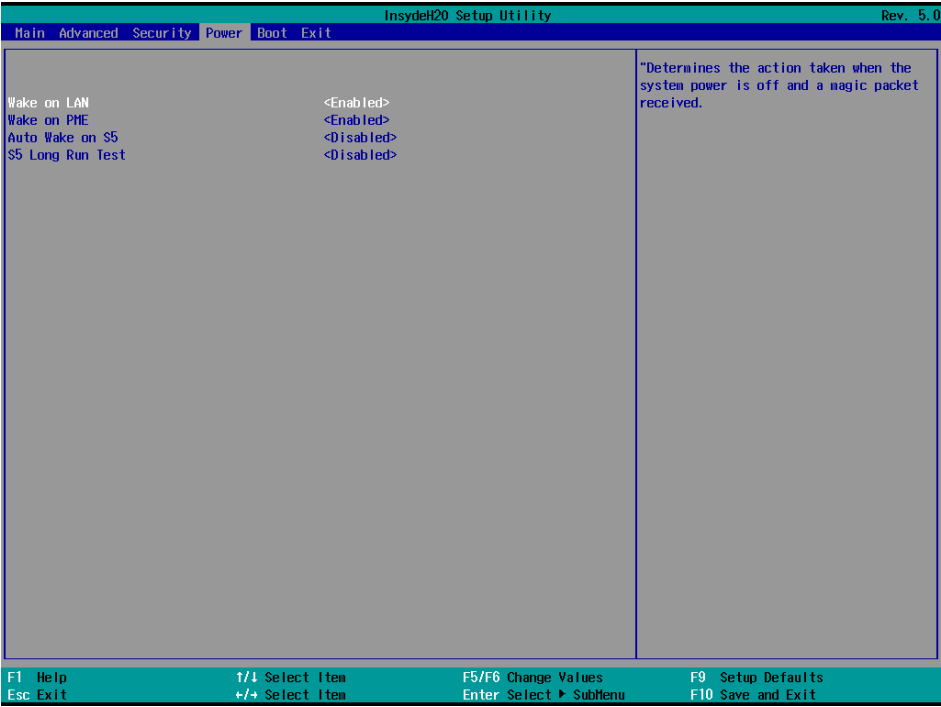


Save & Exit Tab

1. Select [Load Optimal Default], and then press [Enter].

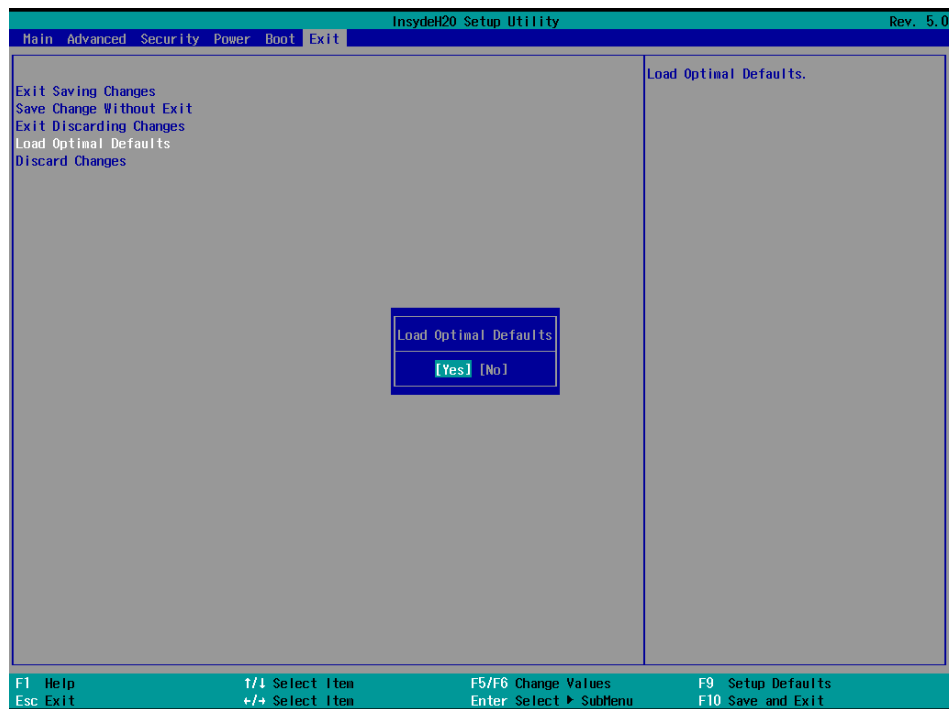


2. Select [Exit Saving Changes], and then press [Enter].

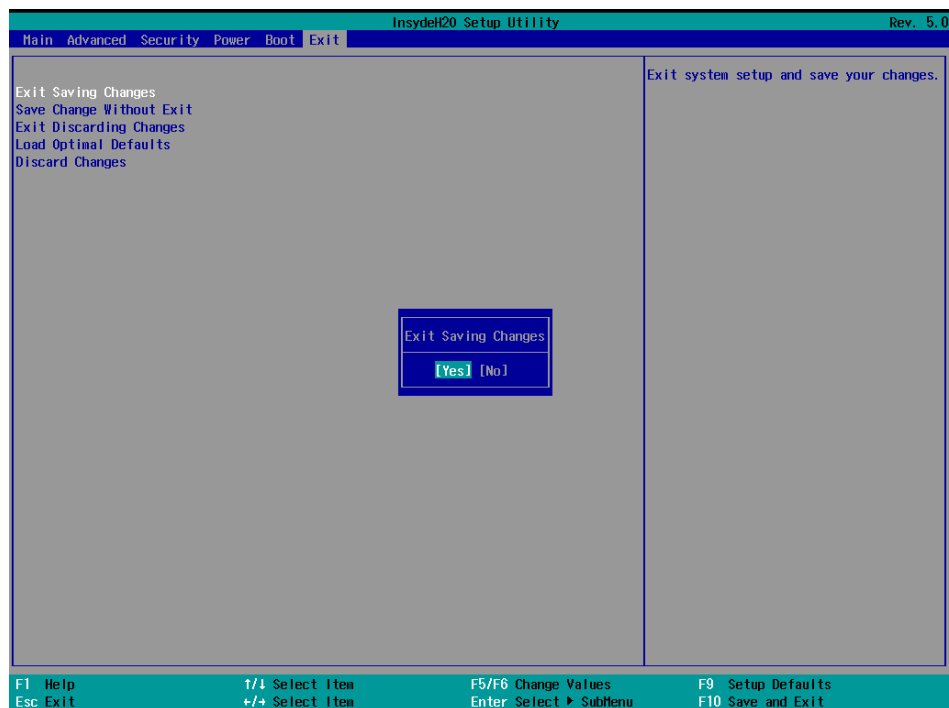

Hardware Installation

Replacing the Rear Covers

1. Place the Touch Terminal on a soft and flat surface, with the LCD panel facing down.
2. Slide the top rear cover off the Touch Terminal.
3. Replace the top rear cover on the Touch Terminal.
4. Repeat steps 1 and 2 to replace the connectors cover.

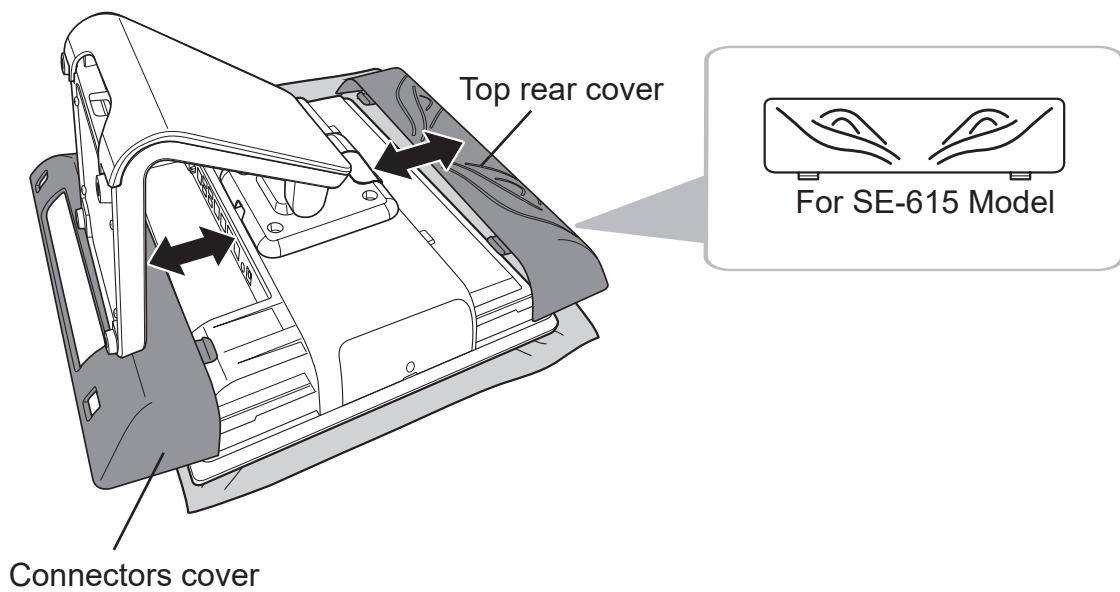


Installing / Replacing the HDD

WARNINN:

Be sure to turn off the power of the Touch Terminal before making any connection or disconnection.

1. Remove the screw from the HDD/identification reader compartment cover. **(a)**
2. Detach the HDD/identification reader compartment cover. **(b)**
3. Install the HDD into its compartment in the Touch Terminal, making sure the connectors are aligned correctly. **(c)**
4. Replace the HDD/identification reader compartment cover **(b)** and secure with the screw. **(a)**

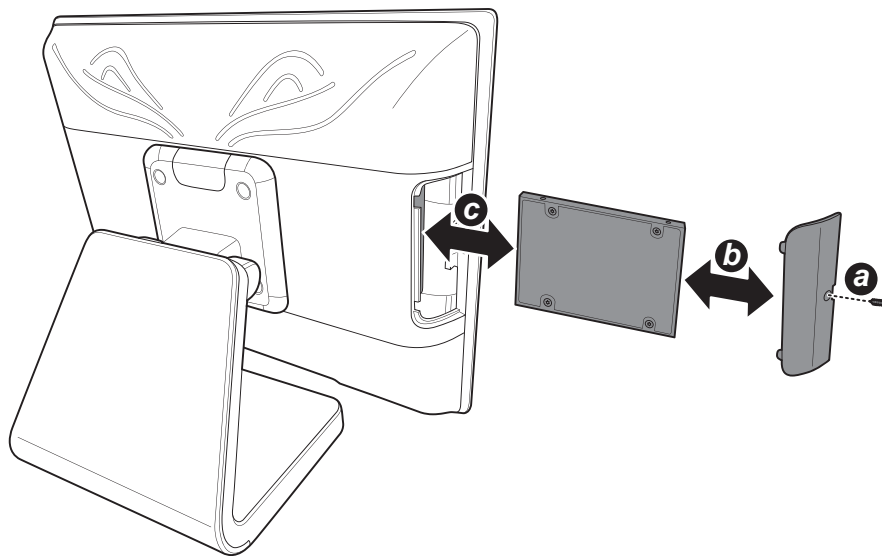


Installing the Customer Display (Optional)

WARNINN:

Be sure to turn off the power of the Touch Terminal before making any connection or disconnection.

1. Place the Touch Terminal on a soft and flat surface, with the LCD panel facing down.
2. Remove the connectors cover. **(a)**
3. Rotate the panel stand to access the screws securing the panel stand to the Touch Terminal. **(b)**
4. Detach the cable compartment cover. **(c)**
5. Remove the four screws securing the panel stand to the Touch Terminal. **(d)**
6. Detach the panel stand. **(e)**
7. Detach the VESA compartment cover. **(f)**
8. Detach the customer display compartment cover. **(g)**
9. Route the customer display cable through the cable compartment on the panel stand. **(h)**
10. Align and install the panel stand to the Touch Terminal. **(e)**
11. Secure the panel stand to the Touch Terminal with the four screws. **(d)**

12. Replace the cable compartment cover. **(c)**
13. Align and install the customer display into its slot on the panel stand. **(i)**
14. Secure the customer display to the Touch Terminal using the two screws. **(j)**
15. Replace the customer display compartment cover. **(g)**
16. Connect the customer display's interface cable to the corresponding port on the Touch Terminal. **(k)**
17. Replace the connectors cover. **(a)**

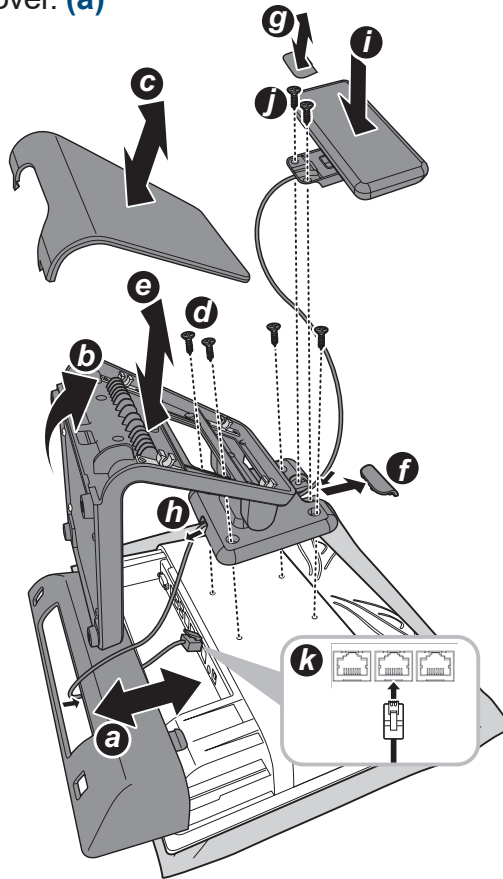


Installing the Secondary LCD Display (Optional)

WARNINN:

Be sure to turn off the power of the Touch Terminal before making any connection or disconnection.

1. Place the Touch Terminal on a soft and flat surface, with the LCD panel facing down.
2. Remove the connectors cover. **(a)**
3. Rotate the panel stand to access the screws securing the panel stand to the Touch Terminal. **(b)**
4. Detach the cable compartment cover. **(c)**
5. Remove the four screws securing the panel stand to the Touch Terminal. **(d)**
6. Detach the panel stand. **(e)**
7. Detach the VESA compartment cover. **(f)**
8. Detach the secondary LCD display compartment cover. **(g)**
9. Route the secondary LCD display cable through the cable compartment on the panel stand. **(h)**
10. Align and install the panel stand to the Touch Terminal. **(e)**
11. Secure the panel stand to the Touch Terminal with the four screws. **(d)**
12. Replace the cable compartment cover. **(c)**
13. Align and install the secondary LCD display into its slot on the panel stand. **(i)**
14. Secure the secondary LCD display to the Touch Terminal using the two screws. **(j)**
15. Replace the secondary LCD display compartment cover. **(g)**
16. Connect the secondary LCD display's interface cable to the corresponding port on the Touch Terminal. **(k)**
17. Replace the connectors cover. **(a)**

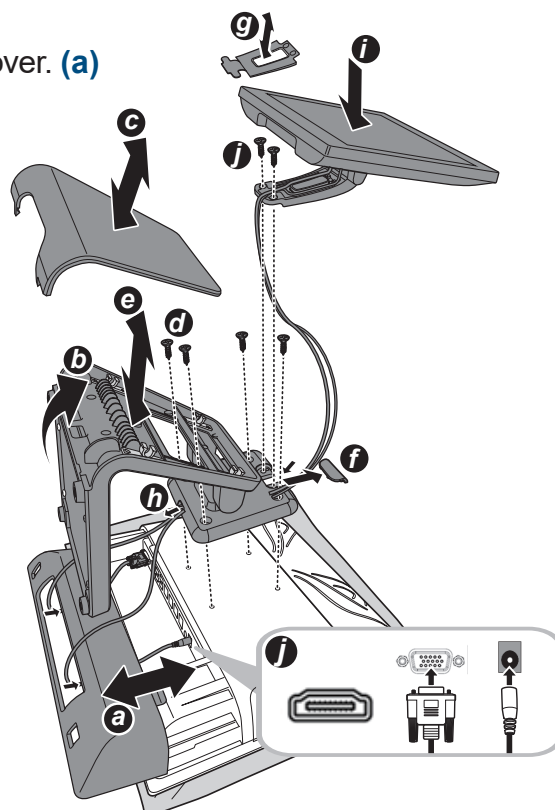

Installing the Identification Reader (MSR/iButton/Fingerprint/RFID/M+i) (Optional)


WARNINN:






Be sure to turn off the power of the Touch Terminal before making any connection or disconnection.

NOTE:

- The identification reader can be installed on either side of the Touch Terminal.

1. Remove the screw securing the HDD/identification reader compartment cover to the Touch Terminal. **(a)**
2. Detach the HDD/identification reader compartment cover from the Touch Terminal. **(b)**
3. Route the optical identification reader connector through the opening on the support bracket. **(c)**
4. Align and install the support bracket to the Touch Terminal. **(d)**
5. Secure the support bracket to the Touch Terminal with the screw. **(e)**
6. Detach the identification reader compartment cover. **(f)**
7. Connect the identification reader connector with the optional identification reader connector. **(g)**
8. Align by the screw holes and then install the identification reader to the support bracket. **(h)**
9. Secure the identification reader to the support bracket with the two screws. **(i)**
10. Attach the identification reader compartment cover to the identification reader. **(j)**

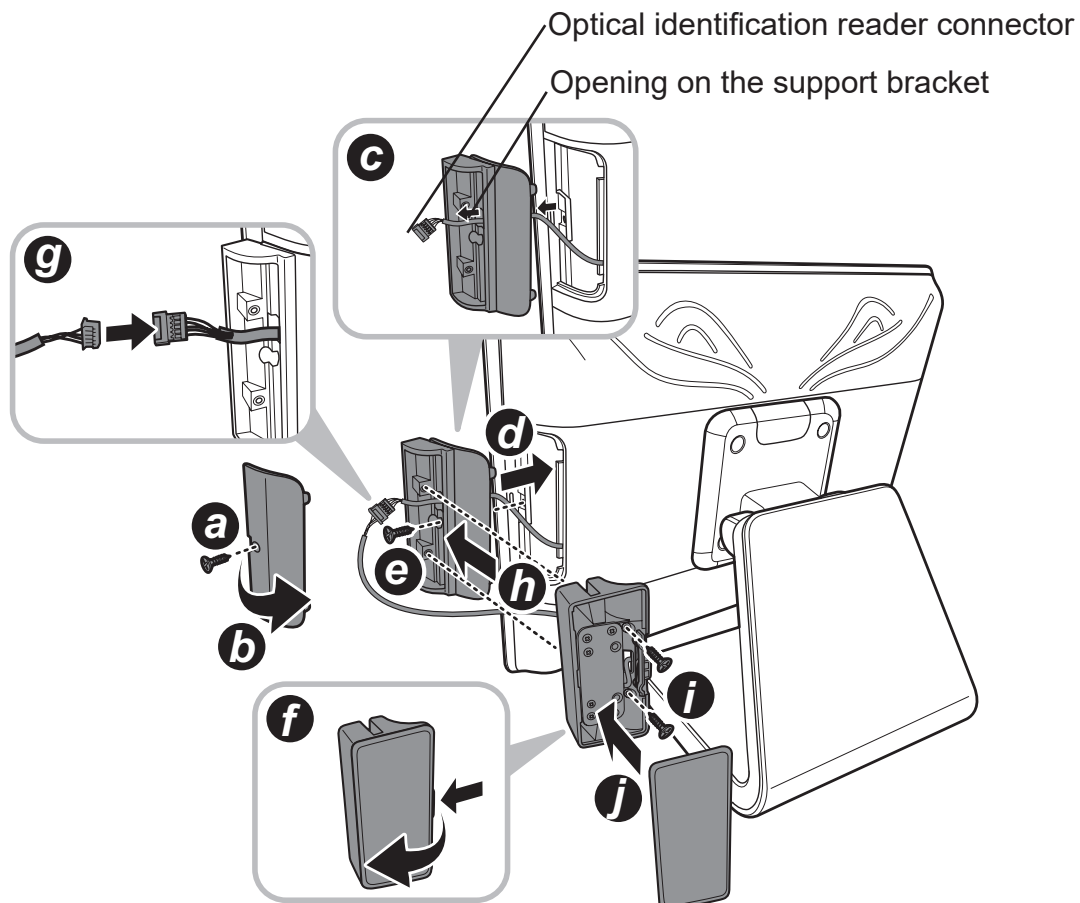

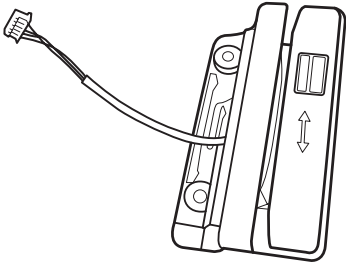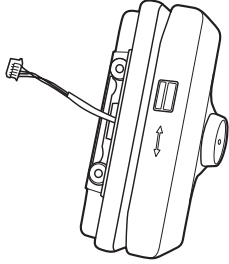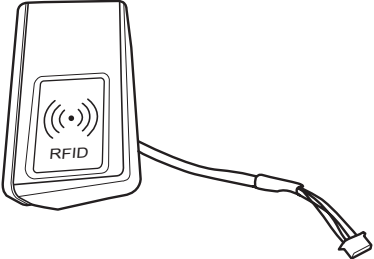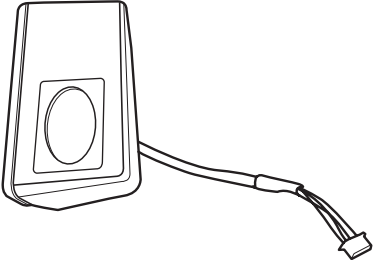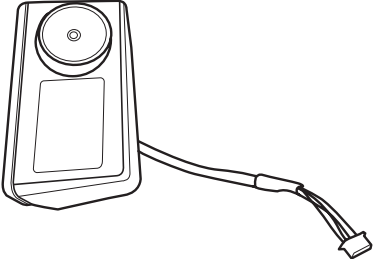
Identification Reader	Item Name
	Magnetic Stripe Reader (MSR)
	MSR + iButton Reader
	Radio-Frequency Identification Reader (RFID)
	Fingerprint Reader
	iButton Reader

Installing the VESA Mount (Optional)

NOTE:

- Use only wall mount kits approved by the manufacturer. Wall mount kits are sold separately.
- The Touch Terminal device is compatible with a VESA mounting hole pattern of 75x75mm.

1. Place the Touch Terminal on a soft and flat surface, with the LCD panel facing down.
2. Rotate the panel stand to access the screws securing the panel stand to the Touch Terminal. **(a)**
3. Detach the cable compartment cover. **(b)**
4. Remove the four screws securing the panel stand to the Touch Terminal. **(c)**
5. Remove the panel stand. **(d)**
6. Align and install the mount bracket on the back of the Touch Terminal. **(e)**
7. Secure the mount bracket to the Touch Terminal with the four screws. **(f)**
8. Drill four small holes on the mounting location and insert the plastic washers into the holes. **(g)**
9. Align by the screw holes and then install the wall bracket on the wall. **(h)**
10. Secure the wall bracket to the wall with the four supplied screws. **(i)**
11. Align and hook the Touch Terminal to the wall bracket, and then push down to secure it into place. **(j)**

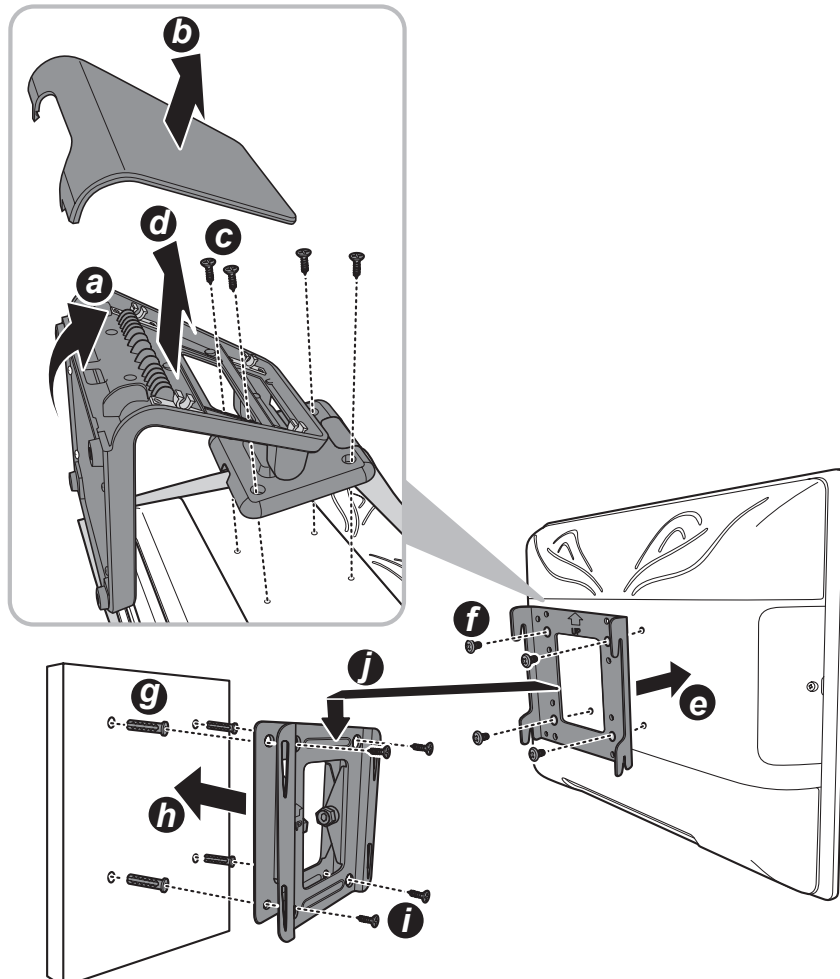

Chapter 6


Frequently Asked Questions (FAQ)

How do I clear CMOS?

SE-615W

To clear CMOS, do the following:

1. Turn off power and pull out the power cord.
2. Insert the RTC1 jumper cap to clear CMOS PIN and remove the jumper cap from clear CMOS PIN.
3. Switch on the power again.
4. Press <F2> to enter CMOS setting and load optimized defaults.

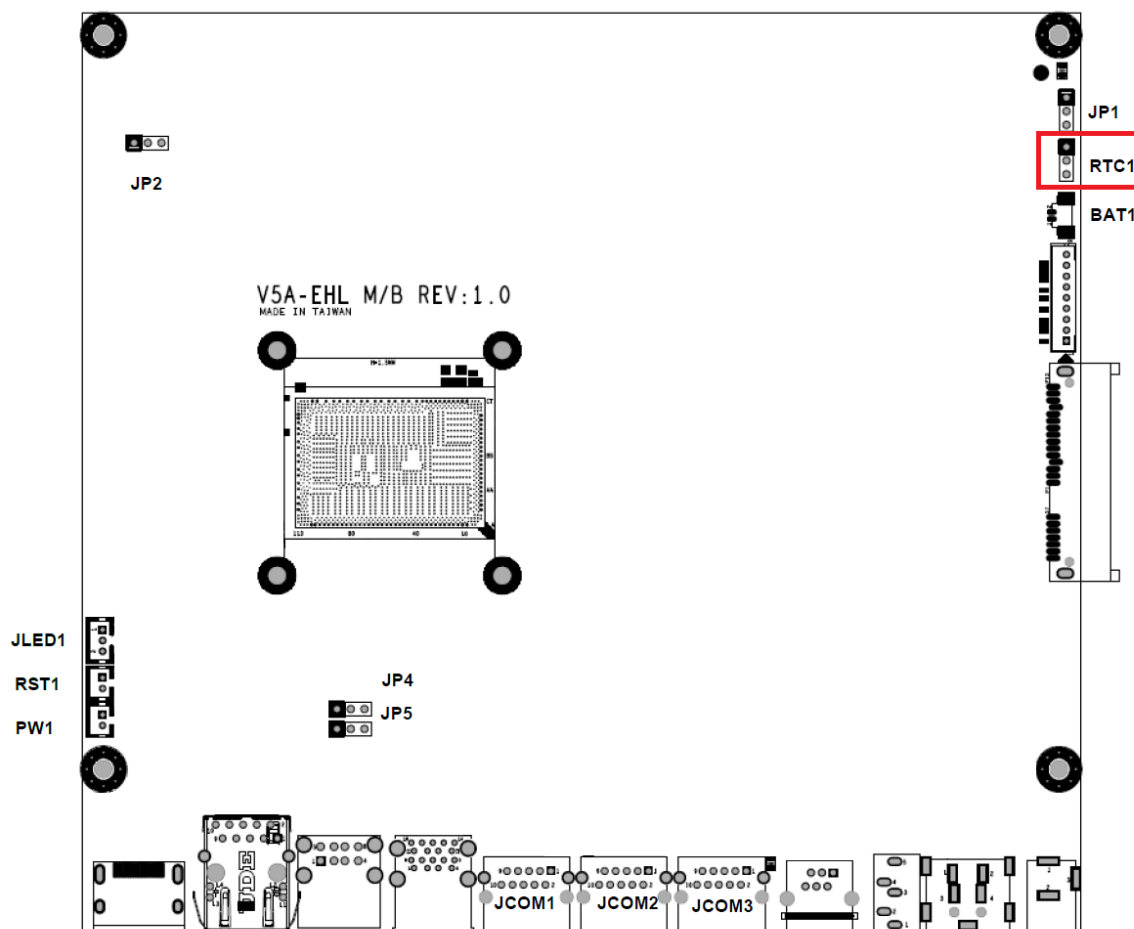

RTC1: Clear CMOS Contents

<p>123</p>	<p>Pin 1-2 Short/Closed Pin 2-3 Short/Closed</p>	<p>Normal(Default) Clear CMOS</p>
------------	--	---------------------------------------